



A higher grade of careful work habits





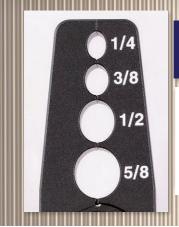



The shape is uniquely designed instead of a perfect circle to efficiently correct flattened copper tubes.



The key to a clean finish is to slowly return it in several times while changing the place of pinching.

